


TMT PHOTOCELL WIRING FOR BX 33 & BX34




IMPORTANT: PRIOR TO INSTALLING PHOTOCELLS, YOU NEED A FULLY FUNCTIONING GATE WITH YOUR REMOTES SYNCED, AND A FULL SYSTEM LEARN COMPLETED ON THE CONTROL BOARD

STEP 1 - COMPLETE A FULL SYSTEM LEARN ON THE GATE

STEP 2 - INSTALL THE PHOTOCELLS AND CHANGE L0-L1 ON THE LCD DISPLAY AS BELOW

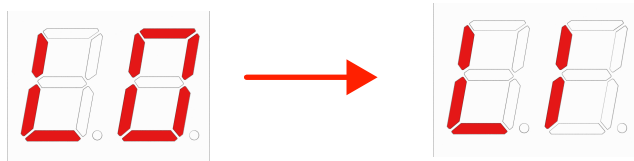

STEP 3 - ENSURE FUNCTION 3 IS SET TO 33

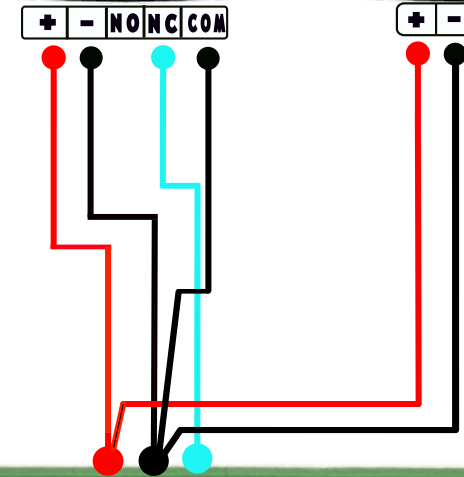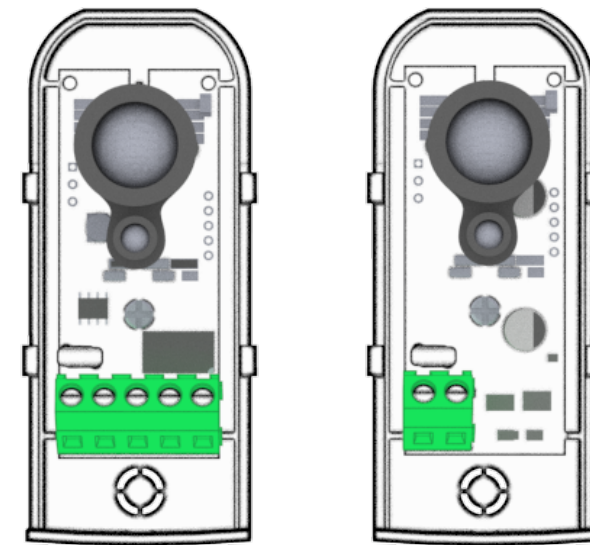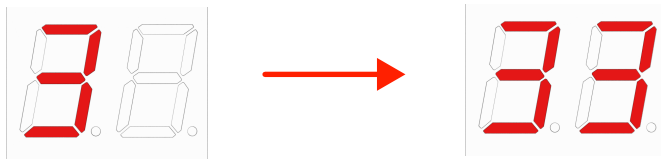

- - 13V
- - GND
- - PH1
- - GND

