


DEA PHOTOCELL WIRING FOR BX 31

IMPORTANT: PRIOR TO INSTALLING PHOTOCELLS, YOU NEED A FULLY FUNCTIONING GATE WITH YOUR REMOTES SYNCED, AND A FULL SYSTEM LEARN COMPLETED ON THE CONTROL BOARD

STEP 1 - COMPLETE A FULL SYSTEM LEARN ON THE GATE

STEP 2 - INSTALL THE PHOTOCELLS AND CHANGE DIP SWITCH SETTINGS SW-6 SET - PH1 TO OFF

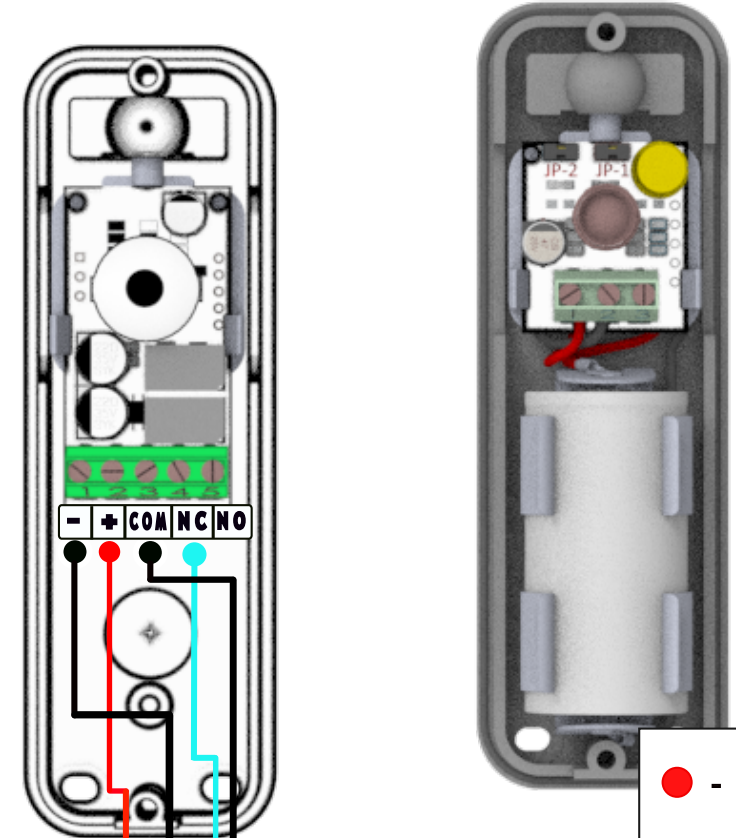

- - 13V
- - GND
- - PH1
- - GND

