




CB 17 & 18 BOARD'S WIRING

STEP 1 - COMPLETE A FULL SYSTEM LEARN ON THE GATE

STEP 2 - INSTALL THE PHOTOCELLS AND CHANGE

DIP-SWITCH SETTINGS ON SW2 & SW3: SET AS BELOW

IMPORTANT: PRIOR TO INSTALLING PHOTOCELLS, YOU NEED A FULLY FUNCTIONING GATE WITH YOUR REMOTES SYNCED, AND A FULL SYSTEM LEARN COMPLETED ON THE CONTROL BOARD

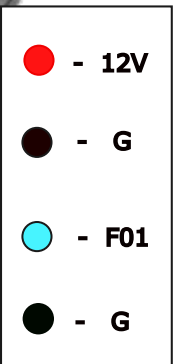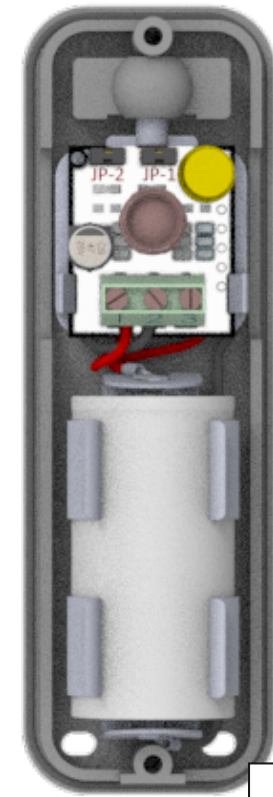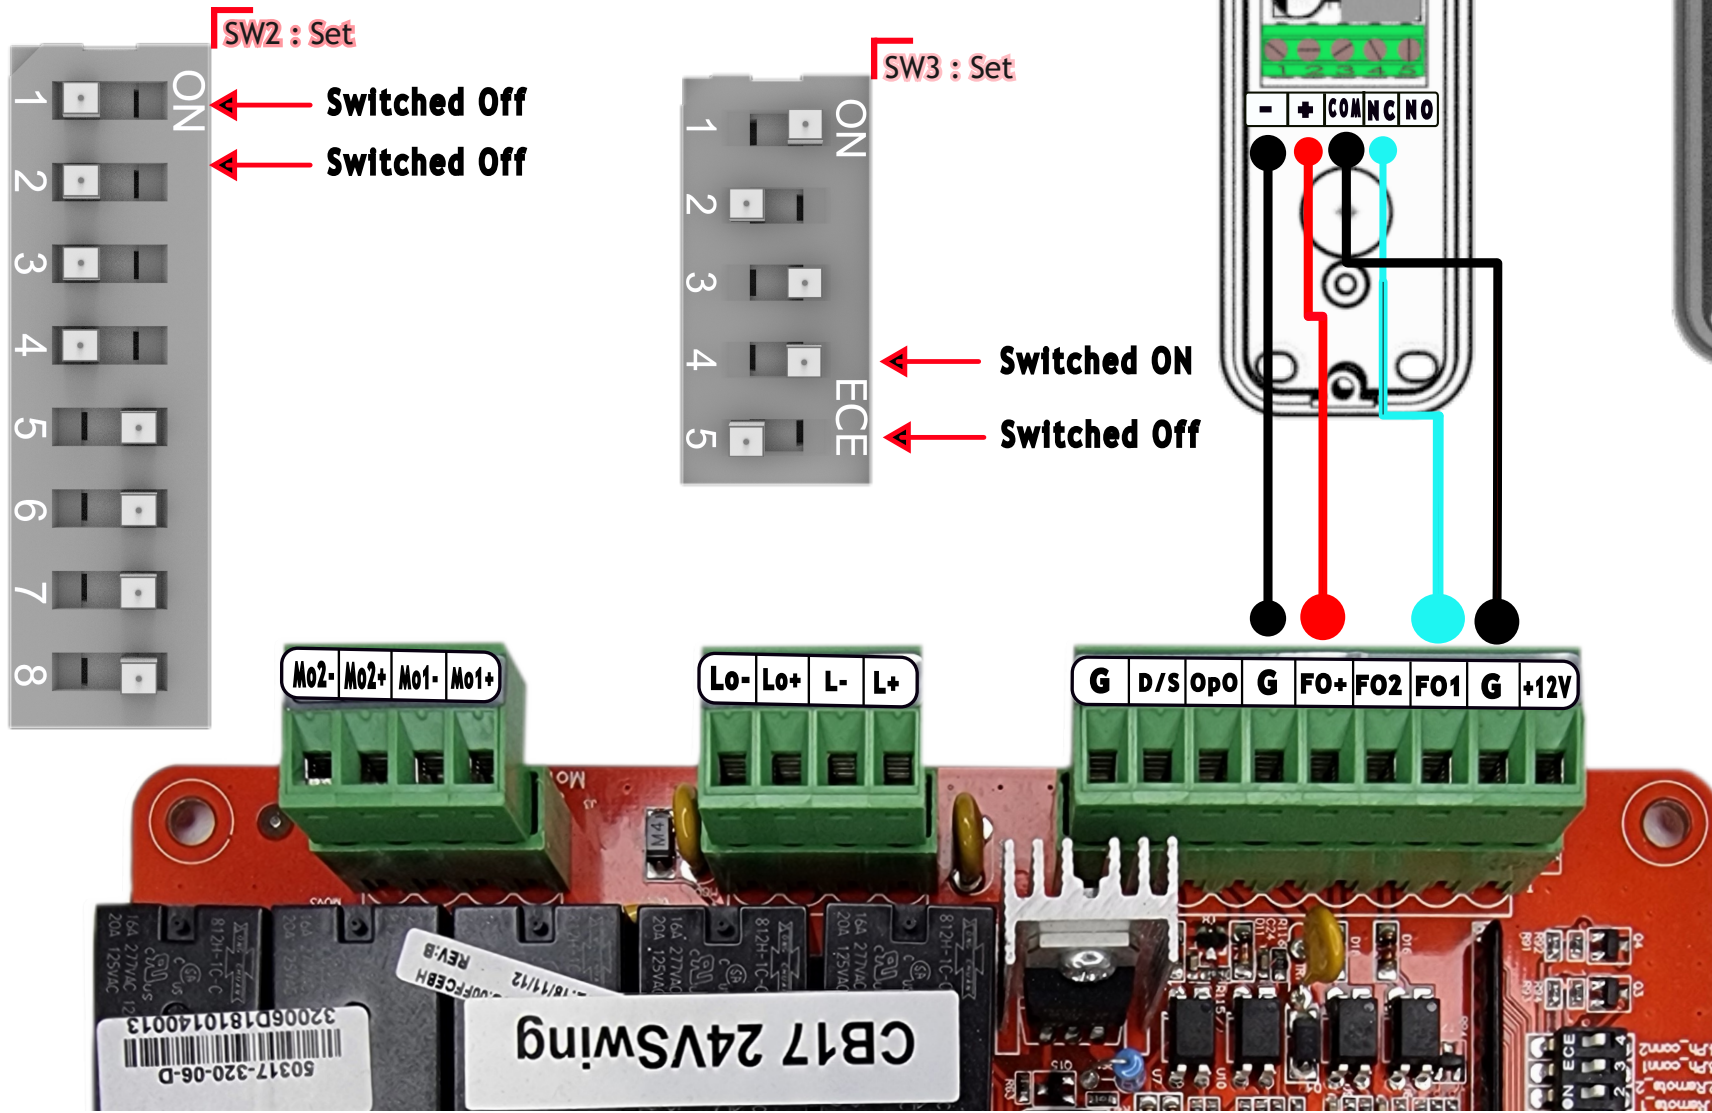

EASYGATE
DEA- PHOTOCELL
wiring details