
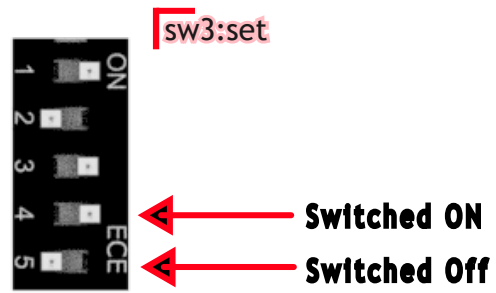





CB 17 & 18 BOARD'S WIRING

STEP 1 - COMPLETE A FULL SYSTEM LEARN ON THE GATE

STEP 2 - INSTALL THE PHOTOCELLS AND CHANGE
DIP-SWITCH SETTINGS ON SW2:SET AND SW3:SET
AS BELOW

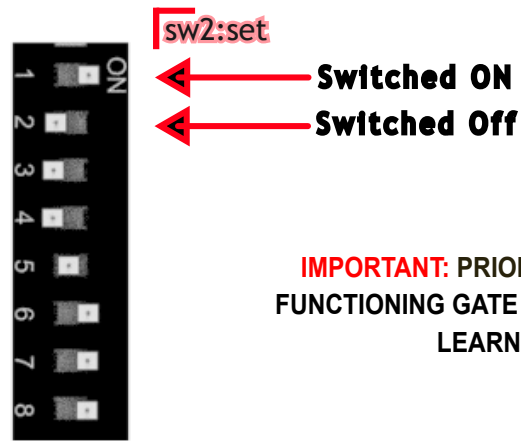

IMPORTANT: PRIOR TO INSTALLING PHOTOCELLS, YOU NEED A FULLY
FUNCTIONING GATE WITH YOUR REMOTES SYNCED, AND A FULL SYSTEM
LEARN COMPLETED ON THE CONTROL BOARD

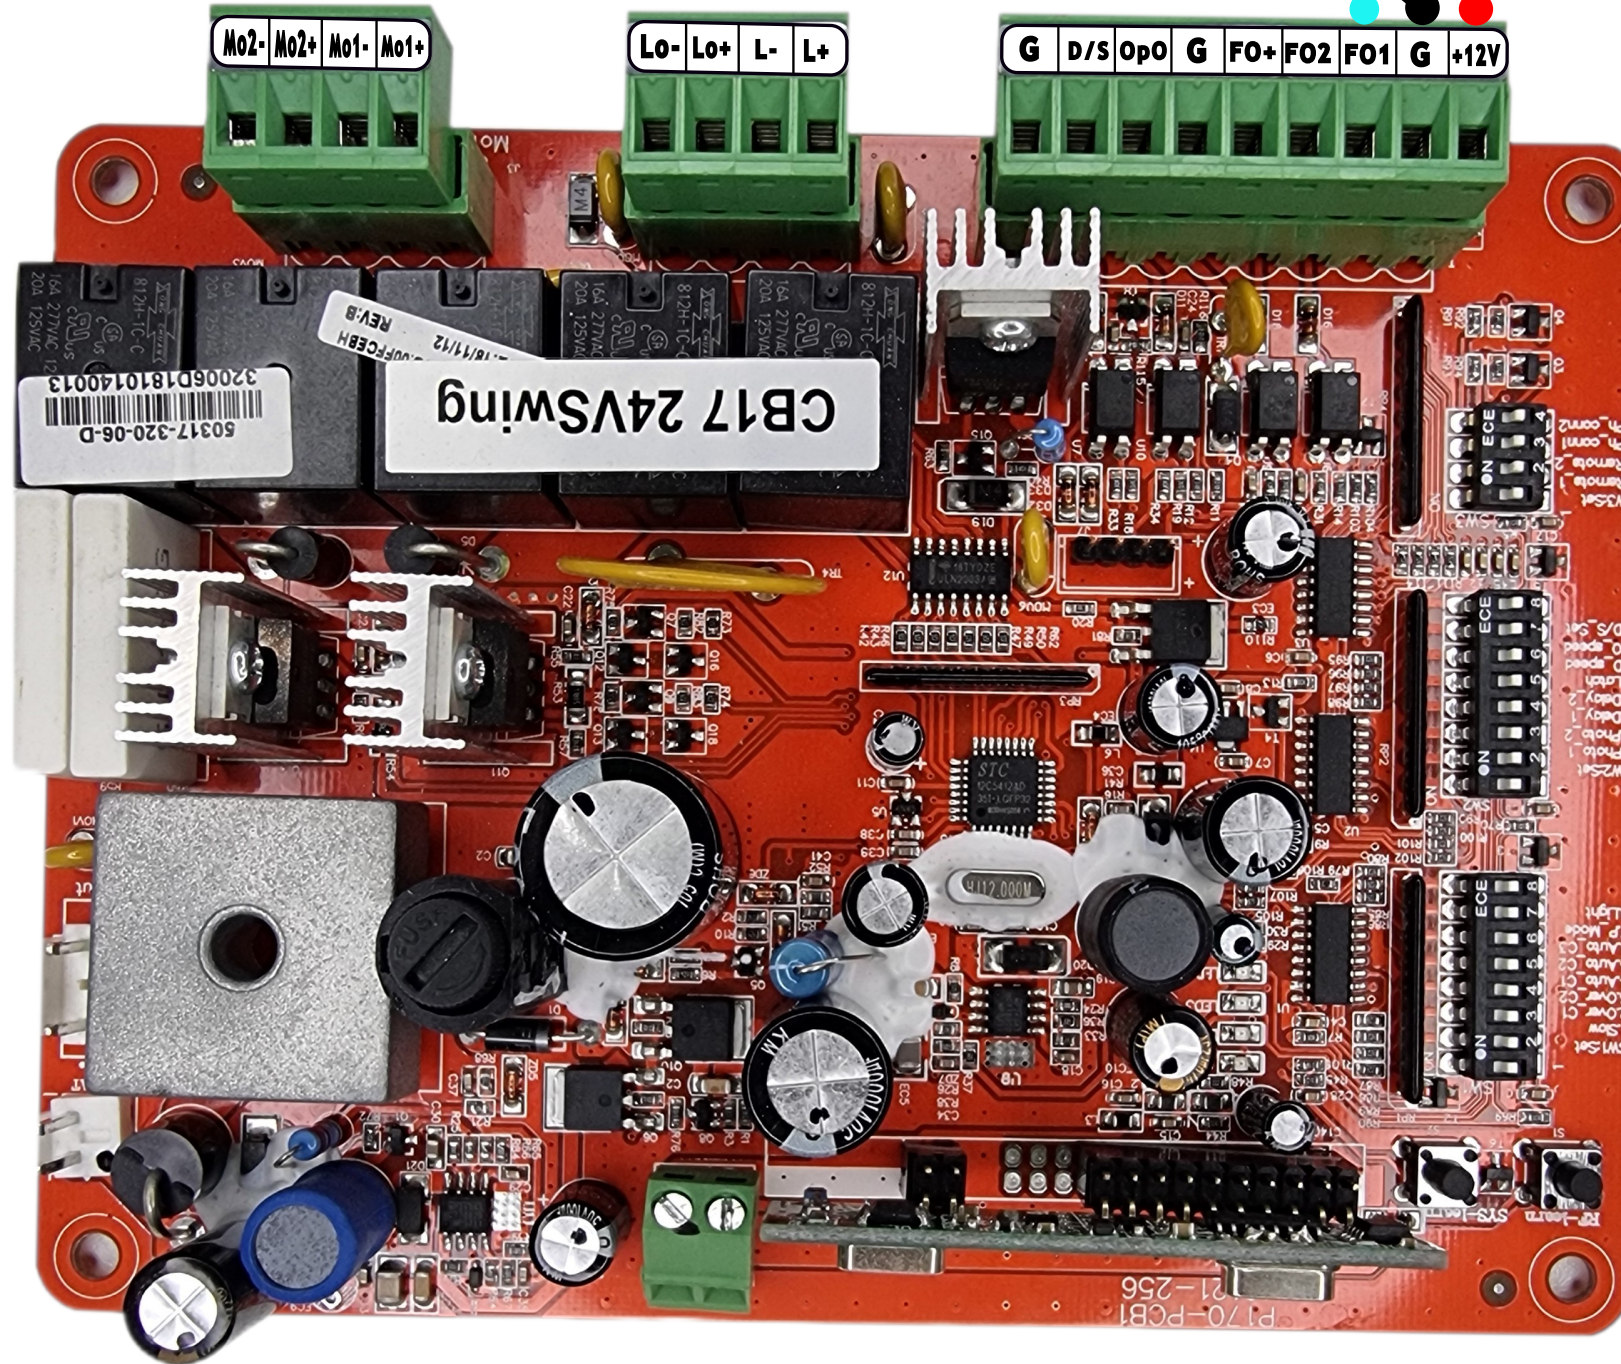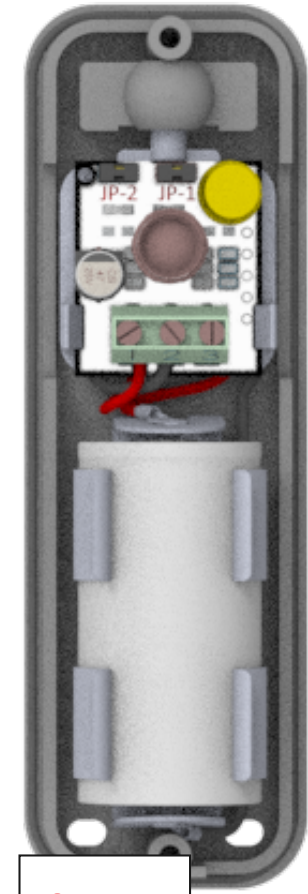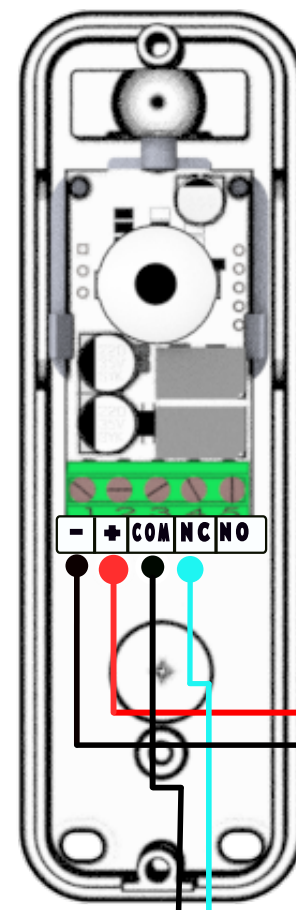

EASYGATE
DEA- PHOTOCELL
wiring details