


CB 17 & 18 BOARD'S WIRING


STEP 1 - COMPLETE A FULL SYSTEM LEARN ON THE GATE

STEP 2 - INSTALL THE PHOTOCELLS AND CHANGE
DIP-SWITCH SETTINGS ON SW2:SET AND SW3:SET
AS BELOW

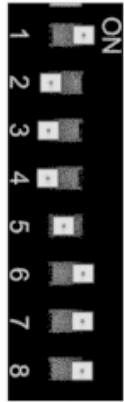

sw2:set

- ▲ Switched ON
- ▲ Switched Off

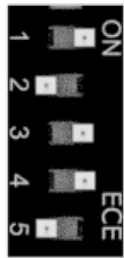

sw3:set

- ▲ Switched ON
- ▲ Switched Off

IMPORTANT: PRIOR TO INSTALLING PHOTOCELLS, YOU NEED A FULLY FUNCTIONING GATE WITH YOUR REMOTES SYNCED, AND A FULL SYSTEM LEARN COMPLETED ON THE CONTROL BOARD

