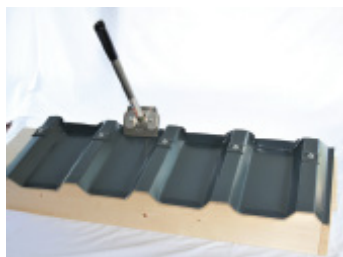

**METAL ROOFING SHEET BENDER: T-SERIES (METAL SHEET PROFILES)**

ITEM NO.	TYPE	PAN WIDTH	RIB HEIGHT	TOOL NAME	HANDLE	COMMENT
<b>ST STEEL&amp;TUBE</b>						
F97	Six Rib	107mm	21mm	T106	Standard	Spacer required.
F108	Plumbdek	131 mm	27mm	T130	Standard	Spacer required.
F108	Trimform	130mm	27mm	T130	Standard	Spacer required.
F49	Trimline	84mm	29mm	T71	Small	Spacer required.
F28	ST7	58mm	37.5mm	T50	Small	Spacer required.
F49	ST900	75mm	38mm	T71	Small	Spacer required.
F193	ST963	230mm	46mm	T215	Standard	Special design.
F155	Paneldek	189mm	37mm	T177	Standard	-
F138	Kliplok	165mm	40mm	T160	Standard	Special design.
F193	Hi Rib	216mm	50mm	T215	Standard	Special design.
F193	Legacy	215mm	50mm	T215	Standard	Special design.
<b>DIMOND ROOFING</b>						
F28	Dimond Clad Rib20	52mm	15mm	T50	Small	Spacer required.
F49	(Dimond Clad Rib50)	86mm	15mm	T71	Small	Spacer required.
F68	Brown Built	90mm	37mm	T90	Small	Special design.
F193	DP955	239mm	46mm	T215	Standard	Special design.
F236	Dimondek 630	270mm	66mm	T258	Standard	-
F155	Dimondek 400	190mm	46mm	T177	Standard	-
F108	Dimondek 300	140mm	46mm	T130	Standard	Spacer required.
F97	Styleline	129mm	28mm	T119	Standard	Spacer required.
F86	Six Rib	105mm	23mm	T106	Standard	Spacer required.
F97	Veedek	127mm	28mm	T119	Standard	Spacer required.
F28	LT7	57mm	36mm	T50	Small	Spacer required.
F28	LT5	57mm	36mm	T50	Small	Spacer required.
F86	Steelspan 900	110mm	55mm	T106	Standard	Spacer required.
F97	Topspan	127mm	53mm	T119	Standard	Spacer required.
F108	Hi Five	131mm	27mm	T130	Standard	Spacer required.
F378	Solarrib	407mm	51mm	T400	Standard	Special design.
<b>STRATCO</b>						
F49	Stratco 900	75mm	37mm	T71	Small	Spacer required.
F97	Superdek Cladding	(128mm)	28mm	T119	Standard	Spacer required.
F49	Trimline	(84mm)	29mm	T71	Small	Spacer required.
F418	Hiland Tray	455mm	44mm	T440	Standard	Special design.



ITEM NO.	TYPE	PAN WIDTH	RIB HEIGHT	TOOL NAME	HANDLE	COMMENT
<b>ROOF.CO.NZ</b>						
F97	Trimrib	127mm	29mm	T119	Standard	Spacer required.
F68	Ribline 800	97mm	29mm	T90	Small	Special design.
F68	Ribline 900	97mm	29mm	T90	Small	Special design.
F28	RT7	51mm	38mm	T50	Small	Spacer required.
F68	Multirib	100mm	40mm	T90	Small	Special design.
F193	Multidek	225mm	50mm	T215	Standard	Special design.
<b>METALCRAFTGROUP</b>						
F397	Espan 340	320mm	49mm	T315	Standard	Special design.
F418	Espan 470	450mm	49mm	T440	Standard	Special design.
F155	Metdek 400	180mm	47mm	T177	Standard	-
F193	Metdek 500	215mm	48mm	T215	Standard	Special design.
F108	T-Rib	130mm	29mm	T130	Standard	Spacer required.
F86	MC 700	115mm	32mm	T106	Standard	Spacer required.
F97	MC 760	125mm	30 mm	T119	Standard	Spacer required.
F97	MC 770	122mm	27mm	T119	Standard	Spacer required.
F86	Metrib 750	105mm	19mm	T106	Standard	Spacer required.
F86	Metrib 760	105mm	22mm	T106	Standard	Spacer required.
F28	Metcom 7	57mm	36mm	T50	Small	Spacer required.
F138	MC 1000	172mm	32mm	T160	Standard	Special design.
F108	Metcom 930	142mm	45mm	T130	Standard	Spacer required.



<b>METAL ROOFING SHEET BENDER: S- SERIES (SANDWICH PANELS)</b>						
ITEM NO.	TYPE	PAN WIDTH	RIB HEIGHT	TOOL NAME	HANDLE	COMMENT
<b>CONQUEROR NZ</b>						
C143	Roof Panel ISJ	172mm	32mm	S165	Standard	Special design
<b>KINGSPAN</b>						
C249	KS 1000 RW	275mm	35mm	S271	Standard	
<b>METALCRAFT GROUP</b>						
C239	Metecnospan	292mm	38mm	S281	Standard	
C143	Thermo span	179mm	32mm	S165	Standard	Special design



<b>FALZID HANDLES FOR BENDERS</b>	
H2	Small
H1	Standard

